

User guide

Z1140



Zapp®

INTRODUCTION

The Fixed Wireless phone operates through a wireless connection instead of a landline phone cable, enabling the subscriber to set up the phone anywhere wireless service is available.

Axesstel CDMA 2000 Fixed Wireless Phone provides high quality and superior performance with many features such as excellent voice quality, packet data service, speaker phone, world clock, calculator, short message service, etc. A large 3-line liquid crystal display provides a user-friendly interface for quick and easy-to-understand information display.

FEATURES

1. Speaker Phone with Hands-Free Dialing
2. Signal Strength Indicator
3. Redial
4. Volume Control
5. Rubber Keypad with Backlit
6. Battery Power Backup
7. Graphic LCD Screen with Backlit
8. One-touch
9. Automatic Sending
10. Phone Book
11. Short Message Service
12. World Clock and Calculator
13. Data Call Service with Speed up to 153kbps

TABLES OF CONTENTS

Safety Precautions.....	4
Checking the Parts	5
Setting up Your Phone	6
Getting to Know Your Phone	8
Display Icons	9
Function Keys.....	10

Basic Operation

Making Calls	12
Redial.....	12
Receiving Calls	13
Adjusting Volumes	14
Choosing the Ring Tone	14
Message Service	15

Phone Book

Internal Phone Book.....	19
Storing in phonebook	19
Searching for Entries in Phonebook....	20
Erasing an Entry in Phonebook	22
Erasing All Entries in Phonebook	22
One-Touch Dialing	23
Two-Touch Dialing	23

Useful Features

Call History.....	25
Displaying Your Phone Number.....	26
Setting up Your LCD.....	26
Mute.....	27
Selecting Time Mode.....	27
Setting the Alarm.....	27
Checking and Clearing Call Times.....	28
Setting Warning Alerts.....	29

Advanced Features

Changing Greeting Message.....	31
System Reset	31
Restricting Use of the Phone	32
Locking / Unlocking the Phone	32
Changing the Lock Code.....	33
World Clock	33
Calculator.....	33

Optional Features

Call Forwarding	35
Call Waiting	35
Three-Way Calling.....	35
Data Call Service.....	35

Miscellaneous

Menu Table	37
Specification	38

SAFETY PRECAUTIONS

1. Avoid placing the phone in a dusty location, or near a source of gas or fire.
2. Don't Shake, hit or drop the phone.
3. To clean the outside of the phone, use only a soft, dry cloth. The chemicals in alcohol, benzene or acetone can damage the surface of the phone.
4. Do not twist or pull the cord out of the phone.
5. Do not disassemble the phone.
6. Do NOT use the power adaptor if:
 - The power cord is damaged.
 - The phone has been dropped or damaged in any way.
7. Use only the provided adaptor for the phone. Do not use the Z1140 adaptor for any other purpose.
8. Use only the provided antenna. Do not use the antenna for any other purpose.
9. Frequency and length of use can affect the life of the self-charging battery. Contact your customer service if the battery is not operating properly.
10. Use only the designated self-charging battery. Dispose of exhausted batteries properly. Never discard a battery in or near fire or flame.
11. Do not place the telephone near water, for example, near a bathtub, sink, wet basement, or swimming pool.

NOTE 1: The input and output voltages are indicated on the adapter.
(Input: AC 100~240V, 50~60 Hz, Output: DC 5.5V, 1A)

CHECKING THE PARTS

Once you have unpacked your phone, make sure that you have all the parts shown below. If any piece is missing or broken, please call your customer service.

1. Main Unit
2. Handset
3. Power Adaptor

4. User Manual
5. Antenna
6. Battery



SETTING UP YOUR PHONE

Installing the phone

This phone operates by receiving DC power from the power adaptor that connects to an electrical outlet. The phone is equipped with a rechargeable battery as a back up in case of an AC power failure.

Desktop installation

1 **2**

3 **4**

Attach the handset

Connect the antenna

Plug the Power adaptor into an appropriate Wall outlet

ON/OFF power switch is located on the bottom side of the phone. Please turn on the power switch to "ON" for operation
And Press and Hold Power key on the front side of the phone.

SETTING UP YOUR PHONE

 
Service Status Check

Display in the Service Area

When the power cord is connected properly, all segments of the LCD window will turn on briefly.

The number of bars of signal strength indicator (antenna icon) indicates the strength of service signal of the area. The display will show the greeting with date and time.


You can change the greeting. (See page 32)

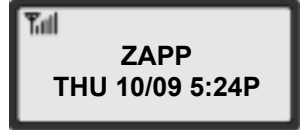

Display in area with no service

When there is no service signal detected in your area, no antenna bar appears. Contact your service provider for the coverage area information.

 Also check if the antenna is connected

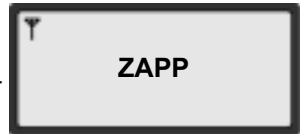

GETTING TO KNOW YOUR PHONE



- 1. Antenna:** Adjusting the position of antenna improves the sound quality of the call.
- 2. Menu/FM:** Press to access the phone's menus.
Press and hold the key for a few seconds to start FM Radio.
(FM is optional. PX310F/PX320F/PX330F only)
- 3. Message:** Press to retrieve messages.
- 4. Volume Key(-, +):** Let you adjust sound levels and scroll through the menu options and displays.
- 5. OK:** Stores phone numbers, and any settings you select in the menu within the phone's memory
- 6. Clear:** Lets you clear your last entry.
- 7. Redial:** Allows you to redial the last number
- 8. Power On/Off:** Press and hold the key for a few seconds to turn on or off your phone
- 9. Speaker Phone:** Turn on or off the speaker phone feature

DISPLAY ICONS

Icons display on the screen to indicate what features you are using, e.g. signal strength, battery status and etc...



Indicate the strength of the signal. More bars indicates stronger signal.



Indicates that a voice or data call is in progress.



Indicates that you are using the phone's menu.



Indicates that the alarm has been set.



Indicates that you are in the Phonebook menu.



Indicates that you have text message or a voice mail message.



Indicates the level of battery power. The more bars, the more power. When the battery is low, the icon blinks, and an alert tone sounds.

FUNCTION KEYS



Press this key to retrieve messages.



Press this key to display the phone's main menu.

Press and Hold this key to turn on or off the FM radio.

If there is an incoming call or if the user attempts to make an outgoing call while the FM radio is on, the FM radio turns off automatically



Press this key to control the volume of keypad, earpiece and speaker. In the menu mode, use this key to scroll through the menu items.



Clears information from display screen.

- To erase one character from the display screen, press it once.

- To erase all characters on the screen, press and hold.

- To go back one step in the menu mode, press it once



Press this key to store a phone number in the phone book or to save menu settings.



The Speaker button is used to place or receive a call without using the handset. The integrated microphone and speaker on the Main unit allows hands free conversation.



Press and hold this key for a few seconds to turn on or off your phone



Press this key to redial the last number called or to connect a call right after dialing the number without waiting until the call is connected automatically.

Basic Operation

Making Calls

Redial

Receiving Calls

Adjusting Volumes

 
Choosing the Ring Tones

Message Service

FM Radio(Optional)

MAKING CALLS

1. Make sure your phone is turned on.
2. Pick up the handset to hear a dial tone.
When the phone fails to acquire service signal, you will hear "No Service" tone (intermittent tone).
3. Dial the number to call. The LCD window displays the number.
4. Wait for a moment for auto calling or press **<REDIAL>**.
5. When the other person answers, begin conversation.
6. To end the call, replace the handset on the main unit.

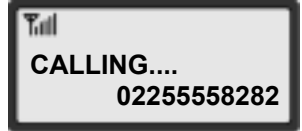

NOTE1: Modifying a phone number while dialing.

- To erase the last digit entered: Press **<CLEAR>**.
- To erase the entire number: Press **<CLEAR>** and hold.
- To input symbol "+" : Press **<0>** and hold

NOTE2: Automatic calling

The phone was programmed to place a call automatically 4~10 seconds after last digit entry. To disable automatic calling or change the delay time.

1. Press **<MENU>** , **<0>** , **<1>**.
2. Press **<VOLUME KEY>**(or **<*>**, **<#>**) to select different time or 'OFF', then press **<OK>** to save. Once automatic calling is disabled, you have to dial the number and press **<REDIAL>** to place a call.

REDIAL

Redial the last number you dialed.

 
1. Pick up the handset or press **<SPEAKER>**.
2. Press **<REDIAL>**.

NOTE: You may not redial when there is no last number dialed stored in the memory. "NO LAST CALL!" message is displayed on the LCD.

RECEIVING CALLS

When there is an incoming call, the phone rings blinks "Incoming Call" message on the display.

1. Simply pick up the handset or press <SPEAKER> to answer the call.
 2. To disconnect, replace the handset or press <SPEAKER>.
- NOTE:** When the ringer volume is set to 'Silent', the phone does not ring. Only the "Incoming Call" message blinks.


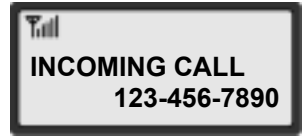


When the Caller ID service is activated.

Call ID Display

The Caller ID feature displays the caller's number when the phone receives a call. If the caller's name and number are linked together in the phone book, the caller's name is displayed. Contact your service provider to activate this feature.

  NOTE: If the call is not answered, the phone displays the "Missed Call" message with the call arrival date and time.

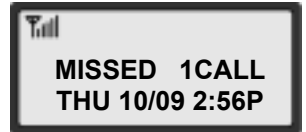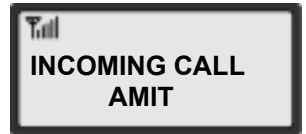

ADJUSTING VOLUMES

You can control the sound volumes including the key tone, Earpiece, speaker and the ringer

Adjusting key tone volume

Press <VOLUME KEY> repeatedly until it reaches proper volume.

Adjusting external speaker volume

Press <VOLUME KEY> repeatedly during hands free call to adjust external speaker volume.

 
Adjusting earpiece volume

Pick up the handset and press <VOLUME KEY> repeatedly during a phone call to adjust earpiece volume.

Adjusting ring volume

1. Press <MENU> , <5> , <3>.
2. Press <VOLUME KEY>(or <*> , <#>) to adjust ringer volume.
3. Press <OK> to save.

NOTE: If 'Silent' is selected, the phone does not ring when an incoming call comes in. Only the "INCOMING CALL" message blinks on the display.

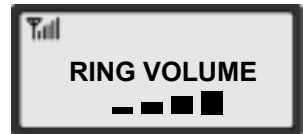

CHOOSING THE RING TONES

You can choose from twenty different ring tones.

1. Press <MENU> , <5> , <2>.
2. Press <VOLUME KEY> (or <*> , <#>) to select ring type.
3. Press <OK> to save.



MESSAGE SERVICE

Message service is a network dependent feature and is available only when your service provider supports it. Check with your service provider to ensure it is providing message service before using this function.

Sending New Text Messages

1. Press **<MESSAGE>** . Press **<1>**(New Message).
2. Write message using the keypad. Toggle between uppercase, Lowercase, and numeric by pressing **<MESSAGE>** button.
3. Press **<OK>**. Press **<2>** (Send).
4. Enter destination number and press **<OK>**.
5. Once the destination number has been entered, the message will be sent.

NOTE: To change default message options, access Message option menu.



Sending Saved Text Messages

1. Press **<MESSAGE>** , **<4>**(Saved MSG).
2. Select message to resend with **<VOLUME KEY>** (or **<*>**, **<#>**) and press **<OK>**.
3. To edit the message press **<MESSAGE>**.

Sending New Text Messages using Templates

 
 
1. Press **<MESSAGE>**. Press **<3>** (Templates).
2. Press **<VOLUME KEY>**(or **<*>**, **<#>**) to view and select the desired template.
3. Press **<OK>** to insert that template into the message body.
4. Continue to type in the rest of the message.
5. Press **<OK>**. Press **<2>** (Send).
6. Enter destination number and press **<OK>**.

Received Text Message

1. When text message arrives, e.g. 'MESSAGE! 10/12 4:04PM' displays shortly and appears in the icon line.
2. Press **<MESSAGE>** ,<2>(Inbox).
3. Press **<VOLUME KEY>** (or **<*>**, **<#>**) to select message you want to see and press **<OK>**.
4. The message, arrival time and call back number (if available) is displayed. If the message is long, it will be scrolled down in 3 seconds automatically.
To scroll up and down manually, press **<VOLUME KEY>** (or **<*>**, **<#>**).
5. If the message contains call back number and you want to make a call to that number, press **<REDIAL>** if you want to call back.


NOTE: If the call back number is stored in the phonebook with a name, the name will display instead of the phone number.

6. To forward the received message to another number, press **<MENU>**.
7. To write a reply to the sender, press **<MESSAGE>**.

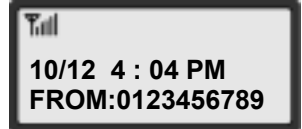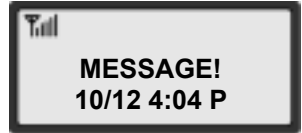

Delete Text Message

 1. After reading the **<MESSAGE>**, Press **<0>** to erase the message.
2. Press **<OK>** to confirm erase.

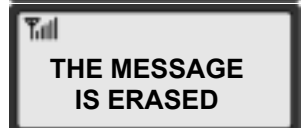

Erasing All Messages

1. Press **<MESSAGE>** , **<6>**(Erase MSG).
2. Select 'YES' with **<VOLUME KEY>** (or **<*>**, **<#>**).
3. Press **<OK>**.



Setting/Releasing Message Alert

1. Press **<MESSAGE>**, **<7>**(MSG Option), **<1>**(MSG Alert).
2. Select ON or OFF with **<VOLUME KEY>**(or **<*>**, **<#>**).
3. Press **<OK>**.

NOTE: While the message alert is set, the phone will alert user when messages arrive.



Saving Sent Message

1. Press **<MESSAGE>**, **<7>** (MSG Option), **<5>** (Save Sent MSG).
2. Select "ON" or "OFF" with **<VOLUME KEY>** (or **<*>**, **<#>**).
3. Press **<OK>**.

NOTE: While this option is turned on, outgoing new messages will be automatically saved. Retrieve the saved messages by accessing Saved Message Menu.

Setting Message Priority Type

1. Press **<MESSAGE>** , **<7>** (MSG Option), **<4>** (MSG Priority).
2. Select "NORMAL" or "URGENT" with **<VOLUME KEY>** (or **<*>**, **<#>**).
3. Press **<OK>**.

Setting Message Auto Delete

1. Press **<MESSAGE>** , **<7>** (MSG Option), **<6>** (Auto Delete).
2. Select "ON" or "OFF" with **<VOLUME KEY>** (or **<*>**, **<#>**).
3. Press **<OK>**.

NOTE: When Auto Delete is enabled, the phone will automatically delete oldest received messages in INBOX in case of full memory.

Phone book

Internal phone Book

Storing in phonebook

Searching for Entries in Phonebook

Erasing an Entry in Phonebook

Erasing all Entries in Phonebook

One-Touch Dialing

Two-Touch Dialing

INTERNAL PHONE BOOK


Your phone has an internal "Phone Book" in which you can store up to 150 frequently used names and numbers.

STORING IN THE MEMORY PHONEBOOK

1. Press **<MENU>**, **<1>**.
2. Enter the name by pressing the alphanumeric keypad and pressing **<OK>** after completed.

NOTE1: If you do not want to enter a name, just press **<OK>** here. The number will be saved as "No Name".

 NOTE2: Name entry is limited to maximum of 16 letters.

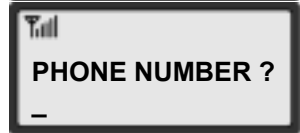

How to Enter & Edit Texts

You can enter letters using the alphanumeric keypad. Each button has 3 to 4 letters assigned. Each stroke on the button scrolls the assigned alphabet letters and the numeric value. Stop pressing when the letter you want appears. You can switch between uppercase, lowercase, and numeric characters by pressing **<MESSAGE>**.

To enter special characters. Press **<1>** repeatedly.

For space, press **<#>**. To go back, press **<*>**.

A single stroke on **<CLEAR>** will erase the last letter in line.

 
 
3. Enter the telephone number and press **<OK>**.
Up to 32 digits can be saved.
4. An empty location displays automatically.
Press **<OK>** to save the number in the location.
5. To assign a different location, enter 2 digit location number and press **<OK>**.

NOTE:

If you select the location in which a number has already been stored, "OVERWRITE?" will be displayed. Press **<OK>** to overwrite or press to go back to automatic location.

6. "CONFIDENTIAL?" will be displays. Press **<OK>** if no secret feature is necessary. To store the number in secret, select 'YES' by pressing **<VOLUME KEY>** (or **<*>**, **<#>**) and press **<OK>** .

NOTE: Secretly saved number will not be displayed unless the lock code is entered. One or two touch-dialing secretly saved number will prompt lock code entry.

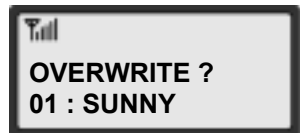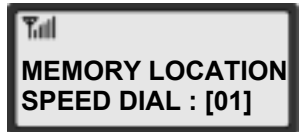

SEARCHING FOR ENTRIES IN PHONEBOOK

You can search information stored in the phone book in various way and make a call directly from the phonebook.

Searching by Name

1. Press **<MENU>**, **<1>**(Phone book), **<1>** (Search), **<1>** (Name).



2. Enter all or part of the name and press **<OK>**.
Example) Enter A and press **<OK>** to find all names



3. The phone displays the memory location numbers along with the name of the first match.

NOTE: "NO NAME MATCHES" appears when there is no name matching with your entry.

 


4. Press **<VOLUME KEY>** (or **<*>**, **<#>**) to search for the name you're looking for and press **<OK>** to display the number.

NOTE: "ENTER LOCK CODE" appears when you try to Access secretly saved number. Enter lock code and press **<OK>**.



5. Press **<REDIAL>** to dial the number displayed to make a call.

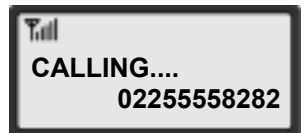

Searching by Phone Number

1. Press **<MENU>**, **<1>**(Phone book), **<1>**(Search), **<2>**(Number).
2. Enter all or part of the number you remember and press **<OK>**.
3. The phone displays the memory location and names which contain your entry.

NOTE: "NO NUMBER MATCHES" appears when there is no number matching your entry.

4. Press **<VOLUME KEY>** (or **<*>**, **<#>**) to search for the name you're looking for and press **<OK>** to display the number.

NOTE: "ENTER LOCK CODE" appears when you try to access secretly saved number. Enter lock code and press **<OK>**.

5. Press **<REDIAL>** to dial the number displayed.



Searching by Memory Location

1. Press **<MENU>** , **<1>** (Phonebook), **<1>** (Search), **<3>** (Memory)

 
2. Enter the three-digit memory location. The phone displays the information of the memory location.

NOTE: "EMPTY LOCATION!" displays when you enter location number that is empty.

3. Press **<OK>** to display the number.

NOTE: "ENTER LOCK CODE" appears when you try to access secretly saved number. Enter lock code and press **<OK>** .

4. Press **<REDIAL>** to dial the number displayed.

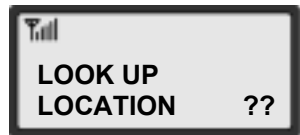

ERASING AN ENTRY IN PHONEBOOK

 
To Erase a Specific Number

1. Press **<MENU>**, **<1>** (Phonebook) and **<3>** (Erase).
2. Press one of search options, **<1>** (Name), **<2>** (Number) or **<3>** (Memory).
3. Enter name, address, or phone number according to search option.
4. Select an item to erase by pressing **<VOLUME KEY>** (or **<*>**, **<#>**) and pressing **<OK>**.

NOTE: "ENTER LOCK CODE" appears when you try to access a secretly saved number.

Enter the lock code and press **<OK>**.


5. Press **<OK>**. again to erase.
6. Press **<OK>**. again to confirm.
To cancel, press **<CLEAR>**.

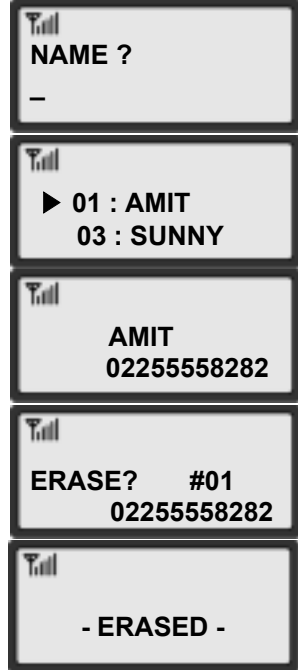

ERASING ALL ENTRIES IN PHONEBOOK

To Erase All Numbers in Phonebook

 1. Press **<MENU>**, **<8>** (Security)
2. Enter lock code.
NOTE: Lock code is set as 0000 from the factory.
To change lock code see page 34.
3. Press **<6>**(Erase Names).
4. Press **<OK>** to confirm.

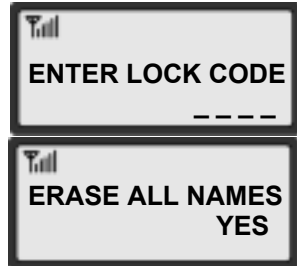

ONE-TOUCH DIALING

Memory locations 01 ~ 09 are special one-touch dialing locations. You can dial the numbers stored in 01~09 by pressing just one key.

1. Pick up the handset or press <SPEAKER>.
2. Press and hold the number of the location (1~9) containing the number to be called for a moment.
3. The name and the phone number will appear and the phone dials the number automatically.

NOTE: Location 1 may be preprogrammed as emergency number or voice mail. Please check with your service provider.



TWO-TOUCH DIALING

Memory locations 10 ~ 99 are two-touch dialing locations. You can dial the numbers stored in 10~99 by pressing the first digit and pressing and holding the second digit.

1. Pick up the handset or press <SPEAKER>.
2. Briefly press the first digit of the memory location number, then press the second digit and hold it down for a moment.

Example) To dial location 23, briefly press the <2>, Then press <3> and hold for a moment.

3. The phone number stored displays and dials automatically.

NOTE1: When you try one-touch or two-touch dialing for the number secretly saved, the phone will prompt for Lock code entry.

Enter the lock code to make a call.

NOTE2: "EMPTY LOCATION" displays when you try one-touch or two-touch dialing with empty location number.



Useful Features

Call History

Displaying Your phone Number

Setting up Your LCD

Mute

Selecting Time Mode

Setting the Alarm

Checking and Clearing Call Times

Setting Warning Alerts

CALL HISTORY

Your phone stores the last 30 outgoing calls, incoming, and missed Calls combined (only when Caller ID function is activated).
You can display and redial these numbers.

Redialing Outgoing Calls

1. Press <MENU>, <3> (Call History), <3> (Outgoing)

NOTE: If there's no outgoing call history.




"OUTGOING CALL MEMORY EMPTY!" displays.

2. Press <VOLUME KEY>(or <*>, <#>) to select number to redial.

3. Press <REDIAL> to redial the number.

NOTE1: Press <OK> to see time and date of the call made. Then press <REDIAL> to redial the number or press <OK> again to save the number in memory

   NOTE2: To redial the last number called. Just pick up the handset and press <REDIAL>.

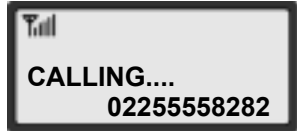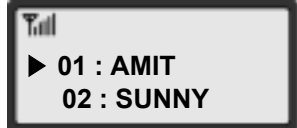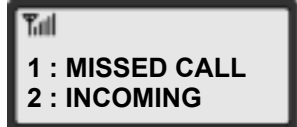

Redialing Incoming Calls

1. Press <MENU>, <3> (Call History), <2> (Incoming).

NOTE: If there's no incoming call record.

"INCOMING CALL MEMORY EMPTY!" displays.

2. Press <VOLUME KEY> or <*>, <#> to select number to redial.

3. Press <REDIAL> to redial the number.

NOTE1: Press <OK> to see time and date of the call arrival. Then press <REDIAL> to redial the number or press <OK> again to save the number in memory.

NOTE2: Incoming history is available only when caller ID is activated.

Redialing missed Calls

To display a list of missed received calls.

1. Press <MENU>, <3> (Call History), <1>(Missed Call).

NOTE: If there's no missed call record, 'MISSED CALL MEMORY EMPTY!' displays.

2. Press <VOLUME KEY>(or <*>, <#>) to select number to redial.

3. Press <REDIAL> to redial the number.

NOTE1: Press <OK> to see time and date of the call arrival. Then press <REDIAL> to redial the number or press <OK> again to save the number in memory.

NOTE2: Missed history is available only when caller ID is activated.

Erasing Call History

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
NOTE: Lock code is set as 0000 from the factory.
To change lock code see page 34
3. Press **<5>** (Erase Logs).
4. Press **<1>** (Outgoing Clear).
5. Press **<OK>** to confirm.

Erasing missed and all logs use the same steps.



Call Timer Display

1. Toggle Call Timer Display.
2. Press **<MENU>**. Press **<7>** (Configuration).
3. Press **<1>** (Call Timer).
4. Scroll to select ON or OFF.
5. Press **<OK>** to confirm.

DISPLAYING YOUR PHONE NUMBER

Displaying Your Phone Number

 
1. Press **<MENU>**, **<7>** (configuration).
2. Press **<7>** (My phone Number).



SETTING UP YOUR LCD

Set Timing for your LCD Back Light

1. Press **<MENU>**, **<7>** (configuration).
2. Press **<3>** (Back Light).
3. Press **<VOLUME KEY>** (or **<+>**, **<#>**) to set how long your phone waits before the backlight turns off.

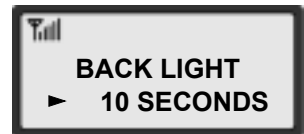

Setting your LCD Contrast

1. Press **<MENU>**, **<7>** (configuration).
2. Press **<4>** (Contrast).
3. Press **<VOLUME KEY>** or **<+>**, **<#>** to select contrast.



MUTE

This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is only available during conversation.

1. Press **<MENU>**, **<1>**(Mute / Un-Mute) during conversation.
The message 'MUTE' blinks to indicate the function is working.
The other party can no longer hear you, but you can hear them.
2. Press **<MENU>**, **<1>** again to resume the conversation.



SELECTING TIME MODE

1. Press **<MENU>**, **<4>**(Time), **<5>**(Time Mode).
2. Select the time display mode by pressing **<VOLUME KEY>** (or **<*>**, **<#>**).
AM/PM: Display 0~12 hours with A or P indicator
24 Hour: Display 00~24 hours
3. Press **<OK>** to save the change.



 
 
SETTING THE ALARM

You can set the alarm sound daily or one time only.

1. Press **<MENU>**, **<4>**(Time), **<1>**(Alarm).
2. Select "ON" by Pressing **<VOLUME KEY>** (or **<*>**, **<#>**) and Press **<OK>**.
3. Enter alarm time and press **<OK>**.
4. Select alarm mode by pressing **<VOLUME KEY>** (or **<*>**, **<#>**) and press **<OK>**.
Daily: Alarm sounds daily.
One time: Alarm sounds once.
5. Enter the duration of the alarm by pressing **<VOLUME KEY>** (or **<*>**, **<#>**) and press **<OK>**.
A bell icon appears in icon line. On alarm time, the icon and "ALARM TIME" message blinks and alarm activates. Press any key to stop the alarm.

Canceling the Alarm Time


1. Press **<MENU>**, **<4>**(Time), **<1>**(Alarm).
2. Select "OFF" by pressing **<VOLUME KEY>** (or **<*>**, **<#>**) and press **<OK>** to store the setting.

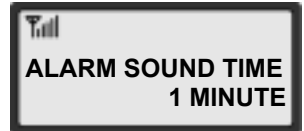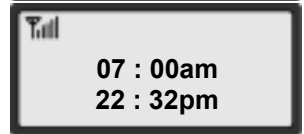

CHECKING AND CLEARING CALL TIMES

Checking the Last call Time

 1. Press **<MENU>**, **<4>** (Time), **<2>**(Last Call).
2. Press **<CLEAR>** to exit the display.

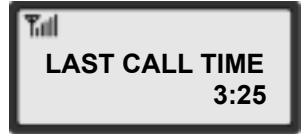


Checking Accumulated Incoming Call Time

1. Press **<MENU>**, **<4>** (Time), **<3>**(Total Time), **<1>** (Incoming).
2. Press **<CLEAR>** to exit the display.




Checking Accumulated Outgoing Call Air Time

 1. Press **<MENU>**, **<4>** (Time), **<3>**(Total Time), **<2>** (Outgoing).
2. Press **<CLEAR>** to exit the display.

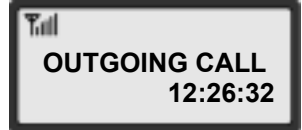

Reset Accumulated Call Time

 1. Press **<MENU>**, **<4>** (Time), **<4>** (Clear Call Time).
2. Press **<STORE>**.

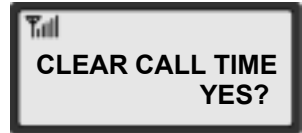

SETTING WARNING ALERTS

You can set your phone to sound warning beeps that indicate:

- Each minute you are on a phone call
- When you are out of the service area

Setting/Releasing 1 Minute Alert

1. Press <MENU>, <5> (Sound), <4> (1 Min Alert).
2. Select ON or OFF by pressing <VOLUME KEY>(or <*>, <#>).
3. Press <OK>.

NOTE: When 1 minute alert is set, the phone gives alert sound each minute while you are on a phone call.



Setting/Releasing Service Alert

1. Press <MENU>, <5> (Sound), <5> (Service Alert).
2. Select ON or OFF by pressing <VOLUME KEY> (or <*>, <#>).
3. Press <OK>.

NOTE: When service alert is set, the phone gives alert sound when the phone is acquiring or loses the service signal.



Setting/Releasing Connection Alert

1. Press <MENU>, <5> (Sound), <7> (Connect Alert).
2. Select ON or OFF by pressing <VOLUME KEY> (or <*>, <#>).
3. Press <OK>.

 
NOTE: When connection alert is set, the phone gives alert sound when the call has been connected to the number dialed.



Setting/Releasing Voice Privacy Alert

1. Press <MENU>, <5> (Sound), <8> (Voice Privacy Alert).
2. Select ON or OFF by pressing <VOLUME KEY> (or <*>, <#>).
3. Press <OK>.

NOTE: When Voice privacy alert is set, the phone gives alert sound when the voice privacy is on.

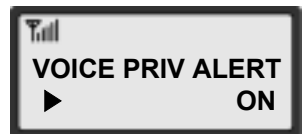

Advanced Features

Changing Greeting Message

System Reset

Restricting Use of the Phone

Locking / Unlocking the Phone

Changing the Lock Code

World Clock

Calculator

CHANGING GREETING MESSAGE

This feature lets you change the greeting message that the phone displays during standby mode.

1. Press **<MENU>**, **<7>** (Configuration).
2. Press **<2>**(Greeting). Current greeting displays.
3. Press **<OK>** to change greeting.

4. Enter your new greeting message with alphanumeric keys
NOTE: Press **<MESSAGE>** to switch between capital and lower case

Example: to enter "My Phone"

Press **<6>**, **<9>**, **<9>**, **<9>**, **<#>**, **<7>**, **<MESSAGE>**, **<4>**, **<4>**, **<6>**, **<6>**, **<6>**, **<6>**, **<6>**, **<6>**, **<3>**, **<3>**.

5. Press **<OK>** to save change.



SYSTEM RESET

To reset your phone settings to manufacture's defaults, follow these steps:

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
NOTE: Lock code is set as 0000 from the factory.
To change lock code see page 34.
3. Press **<7>** (Factory Reset).
4. Select "YES" by pressing **<VOLUME KEY>** (or **<*>**, **<#>**).
5. Press **<OK>**.
6. "PHONE INTIALIZATION" blinks while the phone is resetting.



To reset your phone settings to manufacture's defaults and clear all user data, follow these steps:

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
NOTE: Lock code is set as 0000 from the factory.
To change lock code, see page 34.
3. Press **<8>** (Phone Reset).
4. Select "YES" by pressing **<VOLUME KEY>** (or **<*>**, **<#>**).
5. Press **<OK>**.
6. "PHONE INTIALIZATION" blinks while the phone is resetting.

RESTRICTING USE OF THE PHONE

You can restrict the use of the phone by unauthorized persons

Restricting Outgoing Calls

 
1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.

NOTE: Lock code is set as 0000 from the factory.

To change lock code, see page 34.

3. Press **<2>** (Restrict), **<1>** (Outgoing).
4. Select 'ON' by pressing **<VOLUME KEY>** (or **<*>**, **<#>**).
5. Press **<OK>** to save change.

In this mode, when you try to call, "OUTGOING CALL RESTRICTED" displays and no outgoing call goes through.

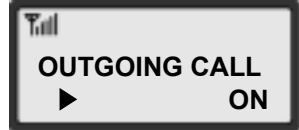

Restricting International Calls

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
3. Press **<2>** (Restrict), **<2>** (International).
4. Select 'ON' by pressing **<VOLUME KEY>** (or **<*>**, **<#>**).
5. Press **<OK>** to save change.

In this mode, when you try to make an international call (headed by 00), "INTERNATIONAL RESTRICTED" displays and no outgoing call goes through.



LOCKING / UNLOCKING THE PHONE

You can lock your phone so that calls cannot be made by unauthorized Persons. You can still receive incoming calls. Turning the phone off does not unlock the phone; the phone stays in locked mode until you change it.

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
3. Press **<3>** (Auto Lock).
4. Select 'ON' or 'OFF' by pressing **<VOLUME KEY>** (or **<*>**, **<#>**).
5. Press **<OK>** to save the change.

NOTE1: When locked, the phone displays "LOCKED".

NOTE2: When locked, you have to enter the lock code to make a call.

NOTE3: You can still receive incoming calls.



CHANGING THE LOCK CODE

The lock code is preset to 0000 from the factory.
You can Change the lock code to any 4 digit number.

1. Press <MENU>, <8> (Security).
 2. Enter lock code.
 3. Press <1> (Change Code).
 4. Enter your new lock code.
- NOTE:** The lock must be four numeric digits.
5. Press <OK>.
 6. Re-enter new lock code for verification.
 7. Press <OK> to confirm.

NOTE: CODE NOT MATCHED TRY AGAIN!" displays if the second entry does not match the first entry.

 


World Clock

Allows you to check the current major cities around the world.

The screen shows the city name, current date and time.



1. Press <MENU>, <6> (Utility), <1> (World Clock).
2. Select <1> (View Clock), the city corresponding to your time zone by pressing <VOLUME KEY> (or <*>, <#>).
3. The local date and time are displayed.

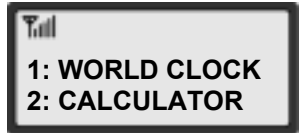

Calculator

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

  1. Press <MENU>, <6> (Utility), <2> (Calculator).
2. Enter the first number using the numeric keys.
3. Use <*>, <#> to select a sign for calculation.
4. To calculate the result, press the <OK>.

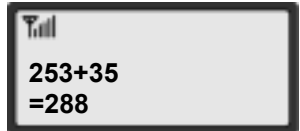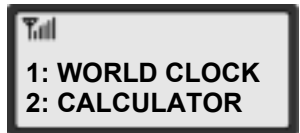

Optional Features

Call Forwarding
Call Waiting
Three-way Calling
Data Call Service

Call Forwarding

Call Forwarding is a feature that lets you forward your incoming calls to another phone number, even if your phone is turned off or is in no service area. Contact your service provider to activate Call Forwarding.

Call Waiting

Call Waiting alerts you to a second incoming call while you are on the conversation. When there's another incoming call, you will hear warning beep. To respond to the call waiting, press **<REDIAL>** or hit shortly the hook switch once.

Pressing **<REDIAL>** again or hitting the hook again will let you go back to the first call. Contact your service provider to activate Call Waiting.

Three-Way Calling

Three-Way Calling is a feature that lets you set up a three-way conversation with two different parties. While you're in conversation with a party, hit the hook switch and place another call with the third party. Then press **<REDIAL>** or hit the hook switch again to connect the three parties together.

Contact your service provider to activate Three-Way Calling.

Data Call Service

Data call Service is a network dependent feature and is available only when your service provider supports it. Check with your service provider for availability.

Connecting your PC requires optional cable, available separately.

1. Connect the phone to your PC with the provided USB data cable.
2. Please refer to the manual provided with the data service kit for setting up a connection on your PC.

Miscellaneous

Menu Table Specification

MENU OPTION TABLE

I	II	III	Explanation	
1. PHONEBOOK	SEARCH	NAME	Used when searching for a phone number in the phone book by name/number/stored memory number	
		NUMBER		
		MEMORY		
	STORE		Used when storing a phone number and name in the phone book	
	ERASE	NAME	Used when erasing a phone number in the phone book	
		NUMBER		
LOCATION				
2. MESSAGES	NEW MESSAGE		Send a new message	
	INBOX		Received SMS messages	
	TEMPLATES		Open pre-saved templates	
	SAVED MSG		Shows sent and failed messages	
	DRAFT MSG		Shows stored new typed messages	
	ERASE MSG		Erase received messages	
	MSG OPTION	MSG ALERT		Set message alert
		MSG ALERT TYPE		Set message alert type
		SET REMINDER		Set message reminder
		MSG PRIORITY		Set default message priority
		SAVE SENT MSG		Auto-save sent messages
AUTO DELETE			Auto-Delete received messages If INBOX is full	
EDIT TEMPLATE			Edit default templates	
3. CALL HISTORY	MISSED CALL		Stores missed incoming calls	
	INCOMING		Stores phone numbers of calls received recently	
	OUTGOING		Stores phone numbers called recently	
4. TIME	ALARM		Alarm On / Off	
	LAST CALL		Shows time duration of last call	
	TOTAL TIME	INCOMING	Shows accumulated incoming call time	
		OUTGOING	Shows accumulated outgoing call time	
	CLR CALL TIME		Resets accumulated call time	
	TIME MODE	AM / PM	Time: AM/PM display mode	
	24 HOURS	Time: 24 Hours display mode		
5. SOUND	RING TYPE		Determines whether the phone alerts the incoming call with sound or only with message	
	RING TONE		Selects the ring type	
	RING VOLUME		Adjust ring volume	
	1 MIN ALERT	ON / OFF	Beeps at one minute interval during conversation	
	SERVICE ALERT	ON / OFF	Beeps when the phone is getting out of or entering service area	
	ALARM TONE	ALARM TONE	Selects alarm sound	
	CONNECT ALERT	ON / OFF	Beeps when the call is connected	
VOX PRIV ALRT	ON / OFF			
6. UTILITY	WORLD CLOCK	VIEW CLOCK	Shows time around the world	
		SET LOCATION	Set your city	
	CALCULATOR		Use the phone as Calculator	
7. CONFIGURATION	CALL TIMER	ON/OFF	Toggles call timer display	
	GREETING		Change greeting	
	BACK LIGHT	Always off/ 10,30,60 seconds/ Always on	Set timing for back light	
	CONTRAST		Set LCD Contrast	

	LANGUAGE		Select your language	
	MY PHONE #		Show your phone number	
8. SECURITY	CHANGE CODE		Change Lock code	
	RESTRICT	OUTGOING	Restrict outgoing calls	
		INTERNATIONAL	Restrict international calls	
		LONG DISTANCE	Restrict long distance calls	
	AUTO LOCK	ON / OFF	Lock the phone	
	VERSION		Show phone information	
	ERASE LOGS	OUTGOING		Erase outgoing calls history
		INCOMING		Erase incoming calls history
		MISSED		Erase missed calls history
		ALL CALL		Erase all calls history
ERASE NAMES		Erase all phonebook entries		
FACTORY RESET		Reset to default settings		
PHONE RESET		Reset to default settings and clears user data		
9. DATA SERVICE	COM PORT		Set port type	
	DATA BAUD		Set data communication speed	
	SET RECEIVE		Set operation mode	

SPECIFICATIONS

Frequency Range	PX310 PX310F	Rx: 462 ~ 468 MHz Tx: 452 ~ 458 MHz	
	PX320 PX320F	Rx: 869 ~ 894 MHz Tx: 824 ~ 849 MHz	
	PX330 PX330F	Rx: 1930 ~ 1989 MHz Tx: 1850 ~ 1909 MHz	
Channel Bandwidth		CDMA 1.25 MHz	
Stability of frequency		0.4 ppm	
External appearance (mm)		205 x 155 x 37 mm	
Weight		500 g (with battery)	
Sending output		maximum 0.23W E.R.P	
Temperature of operation		-20 ~ +50 degrees Celsius	
Relative humidity		5% ~ 90%	
Adapter		Input: AC 100~240V 50~60Hz Output: DC 5.5V/1A	
Battery	Standby	16mA (Slot Cycle Index: 2) 72 hours	
	Talk	2.5 Hours	

Zapp v1.0



DECLARATION OF CONFORMITY

We, SC TELEMobil SA, Romania, j. Ilfov, Bucharest Way no 2B bis, registration number at the Registry of Commerce no: 1596697,

assure, guarantee and declare at our own risk, in conformity with the 5th article from the Government Resolution nr 88 / 2003 regarding the guidance of products and services which could risk the life, health or the work and environment security that the following product:

MOBILE PHONE CMDA450 AXESTEL, model Z1140 (PX310),

made by Axesstel, Inc., Address: 6815 Flanders Drive, Suite 210, San Diego, CA 92121, USA, with AC/DC Adaptor, at which this Declaration is regarding to, will not put in danger the life, the health or the safety of the work, also will not have a negative impact on the environment and it is in conformity with the following:

- SR EN 60065:2001;
- SR EN 60950-1/A11:2004;
- SR EN 60950:2001;
- EN 50360: Iulie 2001 si EN 50361
- Directive 99/5/EEC, 89/336/EEC, 73/23/EEC, in conformity with the Reportul issued by TELEFICATION Edisonstraat 12A, 6902, Olanda;
- Declaration of Conformity of the Producer;
- Device is marked CE 560;
- The adapter is marked CE;

16.07.2007

Balotesti, Ilfov

Project Manager,
Dragos Florescu

